



INSTRUÇÃO PLACA ZF 8HP

ZF 8HP INSTRUCTIONS

Apresentação


Esta placa foi desenvolvida para o controle do câmbio ZF 8HP por uma ECU FuelTech. Esta placa deve ser soldada sobre o módulo de controle original do câmbio.

Siga os passos descritos abaixo para instalar a placa de interface.



IMPORTANTE

Para o controle do câmbio ZF 8HP é necessário utilizar um módulo Peak and Hold PRO para gerenciar os solenoides de atuação.


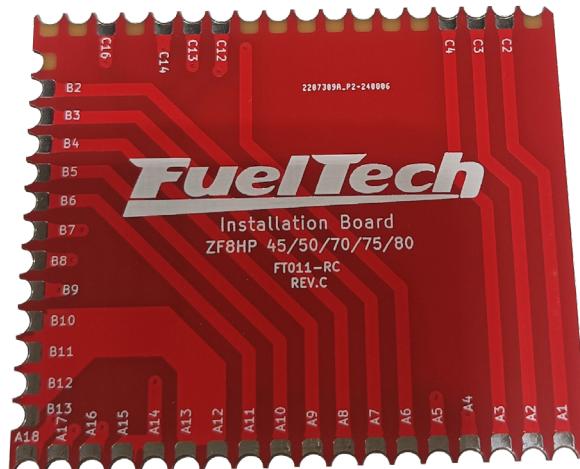


O câmbio ZF 8HP possui uma TCU interna, é necessário abrir a mecatrônica do câmbio para ter acesso aos comando das solenoides e assim gerenciar o câmbio.

- a) Remover de mecatrônica do câmbio.
- b) Remover destrutivamente os pinos plásticos marcados na figura 2.
- c) Utilizar uma micro retifica para abrir a tampa do controle original do câmbio.
- d) Remover o módulo de controle original do câmbio e substituir pela placa de interface FuelTech que fará com que o conector externo ao câmbio tenha contato direto as solenoides de acionamento do câmbio.



Figura 2

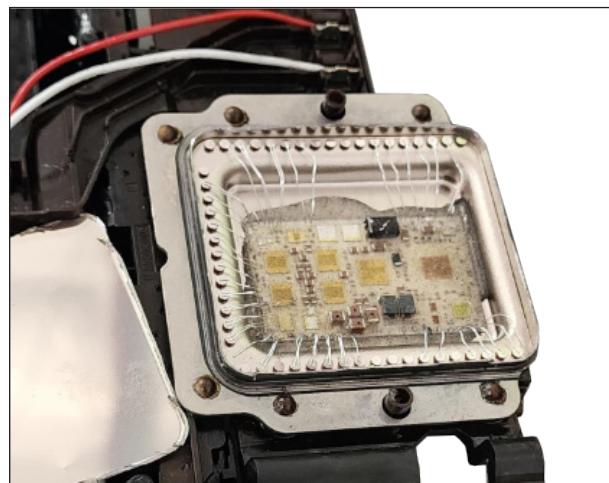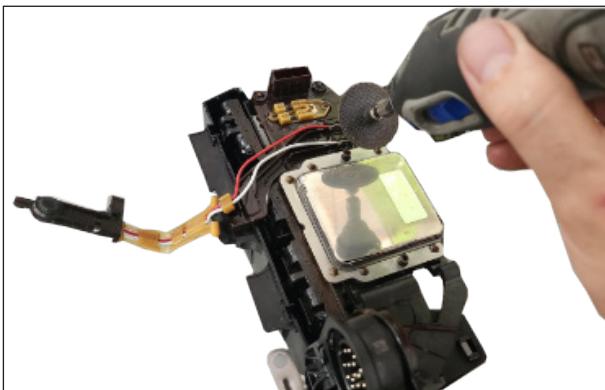

- e) Instalar a placa de interface e soldar todos os terminais conforme mostrado na figura 6.
- f) Coloque a tampa novamente e utilize um silicone para alta temperatura para selar a placa.
- g) Montar a mecatrônica novamente no cambio, executando os procedimento na ordem inversa.

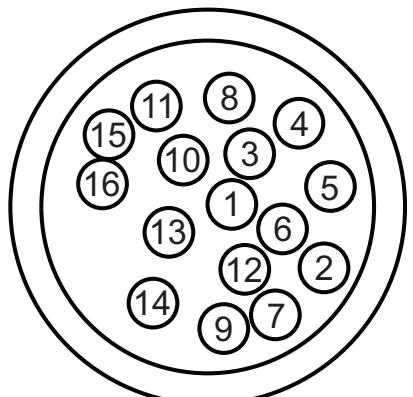


Figura 6



Realizado os procedimentos acima temos acesso as solenoides de controle do câmbio pelo conector externo a TCU, deste modo é possível fazer a ligação da seguinte forma.

Pino conector câmbio	Função câmbio	Função FT600
1	Terra sensor de temperatura câmbio	Terra sensor de temperatura
2	Controle de pressão	Controle de pressão
3	Alimentação 12V sensor primário	12V sensor primário do câmbio (RPM)
4	Acumulador hidráulico (Start/Stop)	Switch de freio (park)
5	Solenóide PARK/OFF	12V constante park motor desligado
6	Desativa solenoide PARK	Switch de freio (park)
7	Embreagem C	Solenóide C transmissão
8	Rotação eixo primário 28 dentes (hall 2 fios + pull down 180 ohms com terra de sensores)	Sinal sensor primário
9	Embreagem E	Solenóide E transmissão
10	Rotação cardan 40 dentes (hall 2 fios + pull down 180 ohms com terra de sensores)	Sinal RPM cardan
11	Embreagem A	Solenóide A transmissão
12	Lockup / TCC	Solenóide lockup
13	Sinal temperatura câmbio	Sinal sensor de temperatura
14	Alimentação 12V para solenoides	12V para solenoides
15	Embreagem D	Solenóide D transmissão
16	Embreagem B	Solenóide B transmissão





IMPORTANTE

O câmbio 8HP originalmente possui um sistema park que é acionando assim que a solenoide para de receber alimentação. Por questão de segurança é recomendado a utilização de um Park delete em carros de corrida, onde este acionamento se dará via cabo.

<https://www.seemslegitgarage.com/product-page/dodge-8hp-park-release-kit>

Para carros de rua que utilizarem este câmbio pode se usar um módulo temporizador, assim se por algum motivo a solenoide ou a FT600 percam alimentação a placa continuara alimentando a solenoide park para que não ocorra a quebra do câmbio. Utilizando este meio para o acionamento do park.

O park deste câmbio é somente desativado quando o motor é ligado e a solenoide A pressuriza a linha fazendo com que o park destrave o câmbio, assim a placa temporizada apenas mantem a pressão por um determinado tempo para que o park não seja acionado.

Entradas e saídas necessárias

São necessárias 3 entradas: RPM do câmbio / Temperatura do câmbio / RPM de Cardan

Para controle deste câmbio é necessário a utilização de 8 saídas: LockUp do câmbio / Solenoide A / Solenoide B / Solenoide C / Solenoide D / Solenoide E / Solenoide F / Pressão de óleo do câmbio

Configuração no FTManager

Abaixo segue as imagens de configuração necessária para a utilização do câmbio.

The image contains four screenshots of the FTManager software interface:

- Rotação do cardan:** Configuration screen for Cardan rotation. It includes fields for "Seleção da origem" (Fio branco or FTCAN 2.0), "Quantidade de dentes" (28,0), "Calcular velocidade da roda" (checked), "Relação do diferencial" (4,00 : 1), "Tipo de pneu" (Radial selected), "Aro da roda" (18), "Largura pneu" (255), and "Perfil do pneu" (35%). It also has sections for "Filtro de sinal" (Filtro de alto nível de médias selected) and a note about it being less sensitive than the rejection filter.
- Rotação do câmbio:** Configuration screen for Gearbox rotation. It includes fields for "Seleção da origem" (Fio branco or FTCAN 2.0) and "Quantidade de dentes" (28,0).
- Entrada habilitada:** Sensor configuration screen for Temperature transmission. It shows "Importar sensor" (Nome do Canal: Temperatura da transmissão), "Offset" (Tipo de offset: Desabilitado), "Filtro digital" (Filtro digital habilitado checked), and a table for "Tabela de interpolação". The table lists voltage values from 0,000 to 4,800 with corresponding temperature values from 356,0 to -4,0.
- Calibrar sensor:** Sensor calibration screen for Temperature transmission. It shows "Sensor de entrada" (Predefinido: Temperatura Fiat (Brasil)), "Customizado" (Nome customizado: Temperatura da transmissão), "Tipo de sinal" (Analógica), "Ativar pullup" (checked), "Número de pontos de média" (63), and "Opções para sensor digital" (Nível superior: 0,000, Nível inferior: 0,000). It also includes a "Preencher valores" button.

A configuração de tipo e tamanho de Pneu serão conforme as do carro do cliente, sendo dentre as informações as únicas que serão alterada conforme o veículo que esta utilizando.

Configurações Controle do câmbio automático.

Controle de câmbio automático

Modo da slavence para 1, 2, 3 e 4	<input checked="" type="radio"/> Limita as trocas até a seleção
Trava na marcha selecionada	<input type="checkbox"/>
Controle de pressão da linha em 2step	<input checked="" type="checkbox"/> Ativado
0,0 (%)	%
Tempo de bloqueio entre incremento de marchas	1,00 (s)
Tempo de bloqueio entre redução de marchas	0,00 (s)
Atraso de troca de marcha por pedalar	<input checked="" type="checkbox"/> Ativado
Tempo de atraso no pedal	3,00 (s)
Acionar atraso quando TPS baixar de	50,0 (%)
Ativar solenóides entre trocas de marchas	<input type="checkbox"/>
Para configurar Pedal Shift manual é preciso aceder ao menu Pedal Shift em Sensores e Calibração	

RPM máximo em cada marcha

	2	3	4	5	6	7	8	9	10	RPM
8000	8000	8000	8000	8000	8000	8000	8000	8000	180	km/h

Velocidade mínima em cada marcha

	2	3	4	5	6	7	8	9	10	km/h
0	8	17	25	33	39	45	160			

Velocidade máxima para redução de marcha

	1	2	3	4	5	6	7	8	9	10	km/h
0	30	50	65	80	100	120	150	200			

Atraso de inicio das compensações de troca de marcha

R	N	1	2	3	4	5	6	7	8	9	10
0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	0,00	s

Tempo da compensação na troca de marcha

R	N	1	2	3	4	5	6	7	8	9	10
0,40	0,40	0,40	0,40	0,40	0,40	0,40	0,40	0,40	0,40	0,40	s

Controle de alinhamento para câmbio automático

<input checked="" type="checkbox"/> Ativado

Solenóide A Solenóide B Solenóide C Solenóide D Solenóide E Solenóide F

<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Staging

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
--------------------------	--------------------------	--------------------------	-------------------------------------	--------------------------	-------------------------------------

Para o funcionamento do Transbrake e do Alinhamento utilizando o gerenciamento do câmbio automático é preciso ativar também a função [Controle de alinhamento / transbrake](#)

Tempos de açãoamento Solenóides

	S	S	S	S
TPS %	0,0	25,0	35,0	100,0
A - Rise	1,050	1,050	0,300	0,300
A - Fall	0,001	0,001	0,000	0,000
A - Hold	0,001	0,001	0,001	0,001
B - Rise	1,050	1,050	0,300	0,300
B - Fall	0,001	0,001	0,000	0,000
B - Hold	0,001	0,001	0,001	0,001
C - Rise	1,050	1,050	0,300	0,300
C - Fall	0,001	0,001	0,000	0,000
C - Hold	0,001	0,001	0,001	0,001
D - Rise	1,050	1,050	0,300	0,300
D - Fall	0,001	0,001	0,000	0,000
D - Hold	0,001	0,001	0,001	0,001
E - Rise	1,050	1,050	0,300	0,300
E - Fall	0,001	0,001	0,000	0,000
E - Hold	0,001	0,001	0,001	0,001
F - Rise	1,050	1,050	0,100	0,100
F - Fall	0,001	0,001	0,000	0,000
F - Hold	0,001	0,001	0,001	0,001

Solenóides					
Solenóide A	Solenóide B	Solenóide C	Solenóide D	Solenóide E	Solenóide F
<input checked="" type="checkbox"/> Ativado					
Acionamento da saída					
<input checked="" type="radio"/> Ativo em 0V					
<input type="radio"/> Ativo em 12V (somente amarelas)					
Frequência de açãoamento					
75 (Hz)					
Solenóide F	Solenóide G	Solenóide H	Solenóide I	Solenóide J	Solenóide K
<input checked="" type="checkbox"/> Ativado					
Acionamento da saída					
<input checked="" type="radio"/> Ativo em 0V					
<input type="radio"/> Ativo em 12V (somente amarelas)					
Frequência de açãoamento					
75 (Hz)					

Mapa de açãoamentos					
Incremento de marcha					
Solenóide A	Solenóide B	Solenóide C	Solenóide D	Solenóide E	Solenóide F
P	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
R	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
N	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Redução de marcha					
Solenóide A	Solenóide B	Solenóide C	Solenóide D	Solenóide E	Solenóide F
P	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
R	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
N	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Tabela de lockup											
TPS (%)	0,00	10,00	20,00	30,00	40,00	50,00	60,00	70,00	80,00	90,00	100,00
1 Lockup	24	24	24	24	24	24	24	24	24	24	24
2 Lockup	24	24	24	24	24	24	24	24	24	24	24
3 Lockup	24	24	24	24	24	24	24	24	24	24	24
4 Lockup	24	24	24	24	24	24	24	24	24	24	24
5 Unlock	24	24	24	24	24	24	24	24	24	24	24
6 Lockup	24	24	24	24	24	24	24	24	24	24	24
7 Unlock	24	24	24	24	24	24	24	24	24	24	24
8 Lockup	24	24	24	24	24	24	24	24	24	24	24
9 Unlock	24	24	24	24	24	24	24	24	24	24	24

P&H Pro Injector Driver -Módulo A

Configuração das saídas

Canal	Atuação	Modo	Peak (A)	Hold (A)
# 1	<input checked="" type="checkbox"/> Cilindro 1 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)
# 2	<input checked="" type="checkbox"/> Cilindro 2 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)
# 3	<input checked="" type="checkbox"/> Cilindro 3 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)
# 4	<input checked="" type="checkbox"/> Cilindro 4 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)
# 5	<input checked="" type="checkbox"/> Cilindro 5 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)
# 6	<input checked="" type="checkbox"/> Cilindro 6 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)
# 7	<input checked="" type="checkbox"/> Cilindro 7 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)
# 8	<input checked="" type="checkbox"/> Cilindro 8 - Bancada A	<input type="radio"/> Customizado	2,0 (A)	1,2 (A)

Configurações avançadas

Proteções de segurança

Proteções

Falha	Alerta na ECU	Desativar módulo
Injector desconectado	<input type="checkbox"/>	<input type="checkbox"/>
Injector em curto	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Alerta de sobreaquecimento do módulo	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Verificação de integridade do módulo	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Alerta para a ECU: Envia a falha para a ECU. O alerta P&H Pro Injector Driver deve estar habilitado no mapa da ECU para indicar a ação a ser tomada.

Desativar módulo: Os recursos módulo desativados ou cancelados em caso de falhas.



TPS (%)	0,00	2,50	5,00	7,50	10,00	12,50	15,00	17,50	20,00	22,50	25,00
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	48,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0
N100,0	100,0	100,0	100,0	100,0	100,0	100,0	98,9	44,2	29,5	0,0	0,0

Presentation


This board was developed to control the ZF 8HP gearbox by a FuelTech ECU. This board must be soldered onto the original gearbox control module.

Follow the steps described below to install the interface board.



IMPORTANT

To control the ZF 8HP gearbox, it is necessary to use a Peak and Hold PRO module to manage the solenoids actuation.

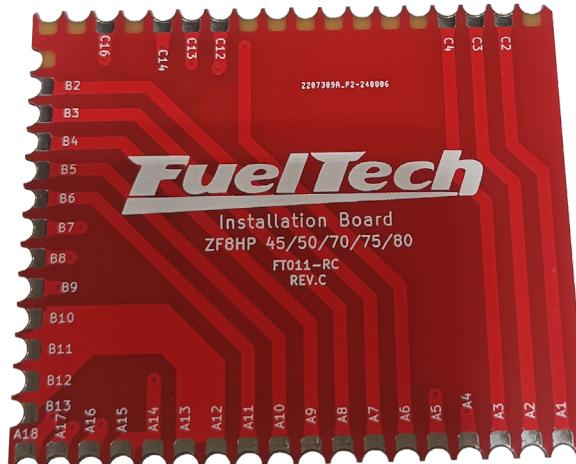

The ZF 8HP gearbox has an internal TCU, it is necessary to open the gearbox mechatronics to access the solenoid controls and thus manage the gearbox.

- a) Remove the mechatronics from the gearbox.
- b) Destructively remove the plastic pins marked in figure 2.
- c) Use a micro grinder to open the original transmission control cover.
- d) Remove the original transmission control module and replace it with the FuelTech interface board, which will ensure that the external transmission connector has direct contact with the transmission actuation solenoids.



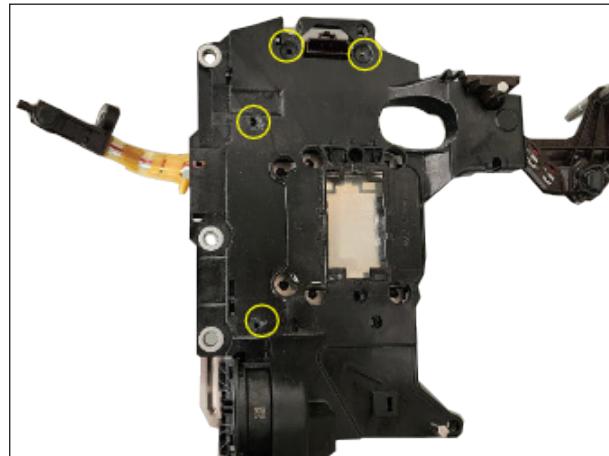



Figure 2

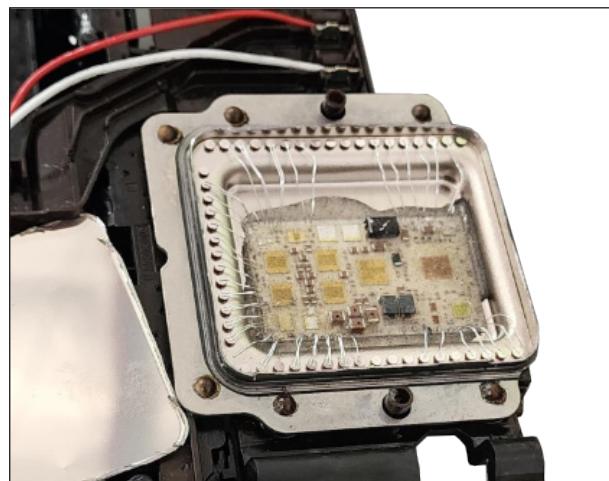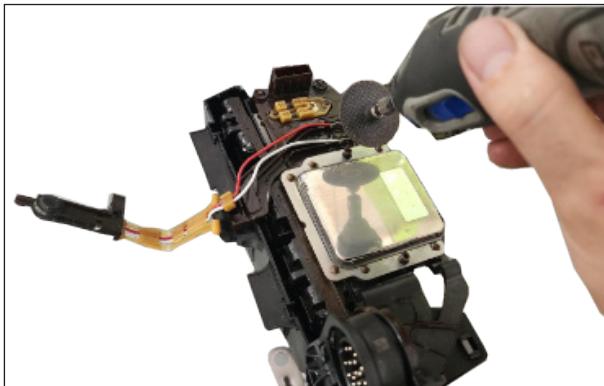

- e) Install the interface board and weld all terminals as shown in figure 6.
- f) Replace the cover and use high-temperature silicone to seal the board.
- g) Reassemble the mechatronics on the gearbox, performing the procedures in reverse order.




Figure 6

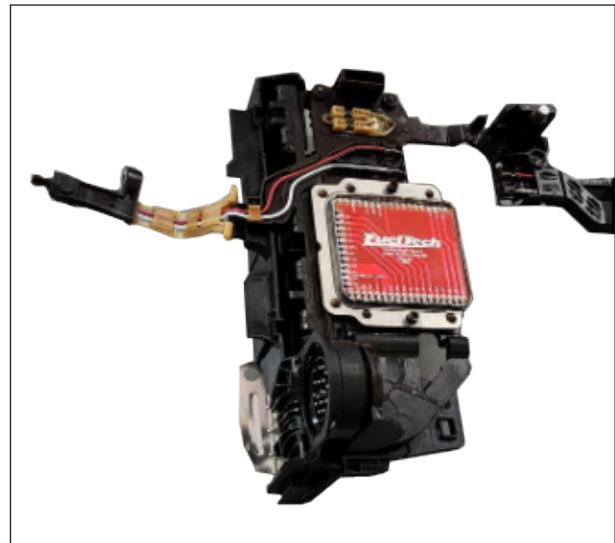

Once the above procedures have been carried out, we have access to the gearbox control solenoids through the external connector to the TCU, so it is possible to make the connection as follows.

Pin connector gearbox	Gearbox function	FT600 function
1	Ground temp sensor gearbox	Ground sensor temp
2	Pression control	Pression control
3	Power 12V primary sensor	12V primary sensor gearbox (RPM)
4	Hydraulic accumulator (Start/Stop)	Switch brake (park)
5	PARK/OFF Solenoid	12V permanent park with engine off
6	Disable PARK solenoid	Switch brake (park)
7	Clutch C	Solenoid C transmision
8	Primary shaft rotation 28 teeth (2 wire hall + 180 ohm pull down with sensor ground)	Primary sensor signal
9	Clutch E	Solenoid E transmision
10	Primary shaft rotation 40 teeth (2 wire hall + 180 ohm pull down with sensor ground)	RPM driveshaft signal
11	Clutch A	Solenoid A transmision
12	Lockup / TCC	Lockup solenoid
13	Gearbox temperature signal	Gearbox temperature signal
14	Power 12V to solenoids	12V to solenoids
15	Clutch D	Solenoid D transmision
16	Clutch B	Solenoid B transmision

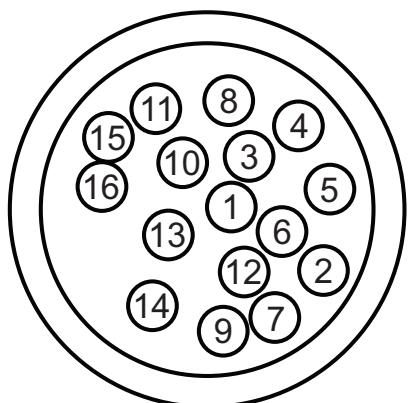



IMPORTANT

The 8HP gearbox originally has a park system that is activated as soon as the solenoid stops receiving power. For safety reasons, it is recommended to use a Park Delete in racing cars, where this activation will be done via cable.

<https://www.seemslegitgarage.com/product-page/dodge-8hp-park-release-kit>

For street cars that use this transmission, a timer module can be used. This way, if for some reason the solenoid or the FT600 loses power, the board will continue to supply power to the park solenoid so that the transmission does not break. This method is used to activate the park.

The park of this transmission is only deactivated when the engine is started and solenoid A pressurizes the line, causing the park to unlock the transmission. Thus, the timer board only maintains the pressure for a certain amount of time so that the park is not activated.

Required inputs and outputs

Three inputs are required: Transmission RPM / Transmission temperature / Cardan RPM

To control this transmission, it is necessary to use 8 outputs: Transmission LockUp / Solenoid A / Solenoid B / Solenoid C / Solenoid D / Solenoid E / Solenoid F / Transmission oil pressure

Configuration in FTManager

Below are the images of the configuration required to use the transmission.

Drive shaft RPM

Select origin
 White wire
 FTCAN 2.0

Number of teeth
28.0 teeth

Calculate wheel speed
 Enabled

Differential ratio
4.00 : 1

Tire type
 Slick / DragRace
 Radial

Tire size
28.0 inches

Wheel rim diameter
18 inches

Tire width
255 mm

Tire height
35 %

Signal Filter

Legacy high average points
 Noise rejection filtering

Legacy high average points:
Smoother signal but may be delayed, default filtering method on 4.11 update and older.

Noise rejection filtering:
Quicker response, more detailed signal.

Input shaft RPM

Select origin
 White wire
 FTCAN 2.0

Teeth number
28.0 teeth

Input enabled

Import sensor

Channel name
Default name: Transmission temperature
Custom name: Transmission temperature

Unit
°F

Decimal places
1 (Min: -3200,0 Max: 3200,0)

Offset
Offset type: Disabled

Offset value
0

Digital filter
 Digital filter enabled

Filter frequency
50

Q factor
0.60

Calibrate sensor

Input sensor
 Default
 Custom

Signal type
Analog

Enable pullup

Averagepoints
63

Digital sensor setup

Digital options
Higher level

Hi level
0.000 V

Lo level
0.000 V

Invert output signal

Interpolation table

Voltage	Value
0.000	672.800
0.356	510.800
0.800	413.600
0.990	381.200
1.240	348.800
1.450	316.400
1.850	284.000
2.720	219.200
3.550	154.400
4.120	89.600
4.800	24.800

Fill values

The tire type and size configuration will be according to the customer's car, and this is the only information that will be changed depending on the vehicle being used.

Automatic transmission control configuration

Automatic Transmission Control

Range selector 1, 2, 3 & 4 mode

- Limit gear up to the lever position
- Hold gear to the lever position

2-Step line pressure control

- Enabled
- 0.0 %

Lock time between upshifts

- 1.00 s

Lock time between downshifts

- 0.00 s

Gear change delay during throttle pedalling

- Enabled
- Delay during throttle pedalling 3.00 s
- Add delay when TPS reduces from 50.0 %

Activate solenoids between gear shifts

- Enabled

To configure manual Paddle Shift you need to access the [Paddle Shift](#) menu under Sensors and Calibration.

Maximum RPM at each gear									
1	2	3	4	5	6	7	8	9	RPM
8000	8000	8000	8000	8000	8000	8000	8000	8000	8000

Minimum speed at each gear									
2	3	4	5	6	7	8	9	10	Hgh
0	5	11	16	21	24	28	99	112	Hgh

Maximum speed to downshift at each gear									
1	2	3	4	5	6	7	8	9	Hgh
0	19	31	40	50	62	75	93	124	Hgh

Gear shift compensation time start delay									
R	N	1	2	3	4	5	6	7	8
0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	s

Gear shift compensation time									
R	N	1	2	3	4	5	6	7	8
0.40	0.40	0.40	0.40	0.40	0.40	0.40	0.40	0.40	s

Automatic transmission transbrake and staging control

- Enabled

Transbrake	Solenoid A	Solenoid B	Solenoid C	Solenoid D	Solenoid E	Solenoid F
Staging	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

To have Transbrake and Staging control working using Automatic transmission control [Staging control / Transbrake](#) function must be activated, under Drag Race Features menu.

PWM Solenoids				
	S	S	S	S
TPS %	0.0	25.0	35.0	100.0
A - Rise	1.050	1.050	0.300	0.300
A - Fall	0.001	0.001	0.000	0.000
A - Hold	0.001	0.001	0.001	0.001
B - Rise	1.050	1.050	0.300	0.300
B - Fall	0.001	0.001	0.000	0.000
B - Hold	0.001	0.001	0.001	0.001
C - Rise	1.050	1.050	0.300	0.300
C - Fall	0.001	0.001	0.000	0.000
C - Hold	0.001	0.001	0.001	0.001
D - Rise	1.050	1.050	0.300	0.300
D - Fall	0.001	0.001	0.000	0.000
D - Hold	0.001	0.001	0.001	0.001
E - Rise	1.050	1.050	0.300	0.300
E - Fall	0.001	0.001	0.000	0.000
E - Hold	0.001	0.001	0.001	0.001
F - Rise	1.050	1.050	0.100	0.100
F - Fall	0.001	0.001	0.000	0.000
F - Hold	0.001	0.001	0.001	0.001

Solenoids	
Solenoid A	<input checked="" type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Solenoid F	<input checked="" type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Solenoid B	<input checked="" type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Solenoid C	<input checked="" type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Solenoid D	<input checked="" type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Solenoid E	<input checked="" type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Solenoid G	<input type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Solenoid H	<input type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Line pressure solenoid	<input type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz
Accumulator solenoid	<input type="checkbox"/> Enabled
Output signal	<input checked="" type="radio"/> Activated at 0V <input type="radio"/> Activated at 12V (Only w/ yellow outputs)
PWM frequency	75 <input type="text"/> Hz

Upshift						
Solenoid A Solenoid B Solenoid C Solenoid D Solenoid E Solenoid F						
P	<input checked="" type="checkbox"/>	<input type="checkbox"/>				
R	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>				
N	<input checked="" type="checkbox"/>	<input type="checkbox"/>				
1	<input checked="" type="checkbox"/>	<input type="checkbox"/>				
2	<input checked="" type="checkbox"/>	<input type="checkbox"/>				
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input checked="" type="checkbox"/>	<input type="checkbox"/>				
8	<input checked="" type="checkbox"/>	<input type="checkbox"/>				

Downshift	
Solenoid A	<input checked="" type="checkbox"/>
Solenoid B	<input type="checkbox"/>
Solenoid C	<input type="checkbox"/>
Solenoid D	<input type="checkbox"/>
Solenoid E	<input type="checkbox"/>
Solenoid F	<input type="checkbox"/>

P&H Pro Injector Driver -Module A

Output configuration

Actuation	Preset	Peak (A)	Hold (A)
Channel 1 Cylinder 1 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>
# 2 Cylinder 2 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>
# 3 Cylinder 3 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>
# 4 Cylinder 4 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>
# 5 Cylinder 5 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>
# 6 Cylinder 6 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>
# 7 Cylinder 7 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>
# 8 Cylinder 8 - Primary	Custom	2.0 <input type="text"/>	1.2 <input type="text"/>

Advanced configurations

Safety protections

Protections

Failure	ECU safety alert	Shut driver off
Injector disconnected	<input type="checkbox"/>	<input type="checkbox"/>
Injector short-circuited	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Hardware overheat warning	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Driver self check	<input checked="" type="checkbox"/>	<input type="checkbox"/>

ECU safety alert: The driver sends the fault to the ECU. The P&H Pro Injector Driver alert must be enabled on the ECU map to indicate the action to be taken.

Read driver Write driver Erase configuration Exit Set as a B module Serial number:

Firmware version
Hardware version
Serial number

Lookup table													
		TPS (%)	0.00	13.33	26.67	33.33	40.00	50.00	66.67	70.00	80.00	90.00	100.00
1 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
1 Unlock		15	15	15	15	15	15	15	15	15	15	15	15
2 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
2 Unlock		15	15	15	15	15	15	15	15	15	15	15	15
3 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
3 Unlock		15	15	15	15	15	15	15	15	15	15	15	15
4 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
4 Unlock		15	15	15	15	15	15	15	15	15	15	15	15
5 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
5 Unlock		15	15	15	15	15	15	15	15	15	15	15	15
6 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
6 Unlock		15	15	15	15	15	15	15	15	15	15	15	15
7 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
7 Unlock		15	15	15	15	15	15	15	15	15	15	15	15
8 Lockup		15	15	15	15	15	15	15	15	15	15	15	15
8 Unlock		15	15	15	15	15	15	15	15	15	15	15	15

Guaranteed pressure table																		
		TPS (%)	0.00	2.50	5.00	7.50	10.00	12.50	15.00	17.50	20.00	25.00	30.00	40.00	45.00	50.00	70.00	100.00
N100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
N100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
T100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
T100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
S100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
S100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
P100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
P100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
R100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0	0.0	0.0	0.0
R100.0		100.0	100.0	100.0	100.0	100.0	100.0	66.3	58.9	44.2	29.5	0.0	0.0	0.0	0.0			



455 Wilbanks Dr.
Ball Ground, GA, 30107, USA

Phone: +1 678-493-3835
Toll Free: +1 855-595-3835

E-mail: info@FuelTech.net
www.FuelTech.net



FuelTechUSA

POWER FT
ECU |