

Boost Controller Dual Injector Block

Boost controller dual injector block

Use with FT600 / FT550 / FT500 / FT500LITE / FT450 integrated boost controller.

inclued cushions kit (2 cushions, 2 washers and 4 nuts)

Pressure Input: 1/8" NPT

Output to Wastegate: 1/8" NPT


Recommended injectors (not included):

High impedance Bosch 1700 cc/min (165 lb/hr) High impedance Bosch 2200 cc/min (210 lb/hr)

Wastegate pressure sensor (PS-150) is also needed for Power FT ECU integrated boost controller.

Installation diagram

- 1 Decrease solenoid/injector trigger connected to the yellow output
- 2 Increase solenoid/injector trigger connected to the yellow output
- 3 Negative
- 4 Free air
- 5 Injectors
- 6 Control pressure Wastegate;

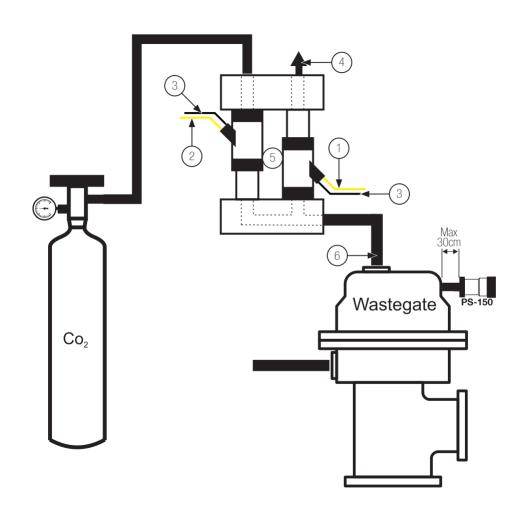

FuelTech

455 Willbanks Dr.

Ball Ground, GA 30107

678-493-3835

www.fueltech.net